

**1.** Position ball bearing slide where desired in closet






**2.** Align front of slide with front of closet panel as shown in Figure 1. If the system holes align properly with holes in the slide, use Euro screws to attach the slide, if not, use #8 x 1/2" flat head screws.

**3.** Position and install other slide.

**4.** Place back wire of basket into hook on left and right slide as shown in Figure 2.

**5.** Pivot the basket down so that the tabs on the basket are inserted into the slots in the slides as shown in Figure 3.

I-CB-0714

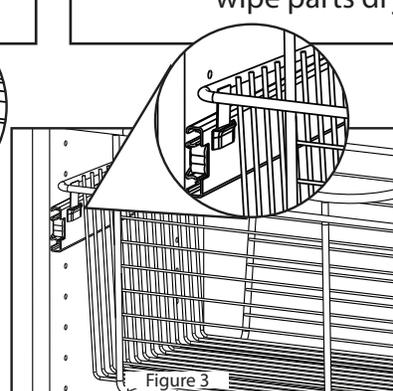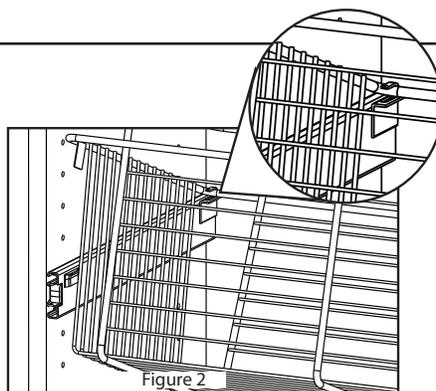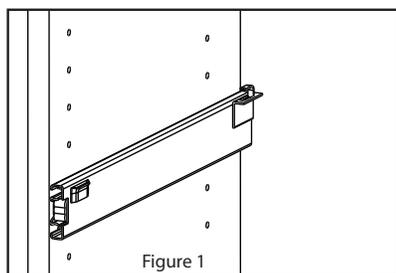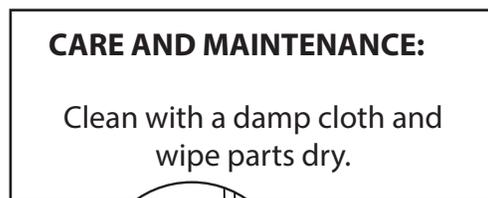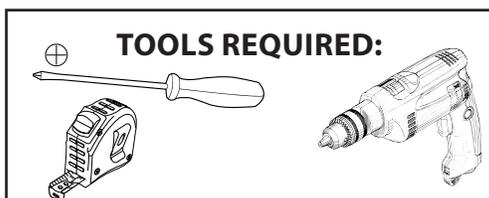

**1.** Position ball bearing slide where desired in closet

**2.** Align front of slide with front of closet panel as shown in Figure 1. If the system holes align properly with holes in the slide, use Euro screws to attach the slide, if not, use #8 x 1/2" flat head screws.

**3.** Position and install other slide.

**4.** Place back wire of basket into hook on left and right slide as shown in Figure 2.

**5.** Pivot the basket down so that the tabs on the basket are inserted into the slots in the slides as shown in Figure 3.

I-CB-0714