




REV·A·SHELF®

INSTALLATION & ASSEMBLY INSTRUCTIONS

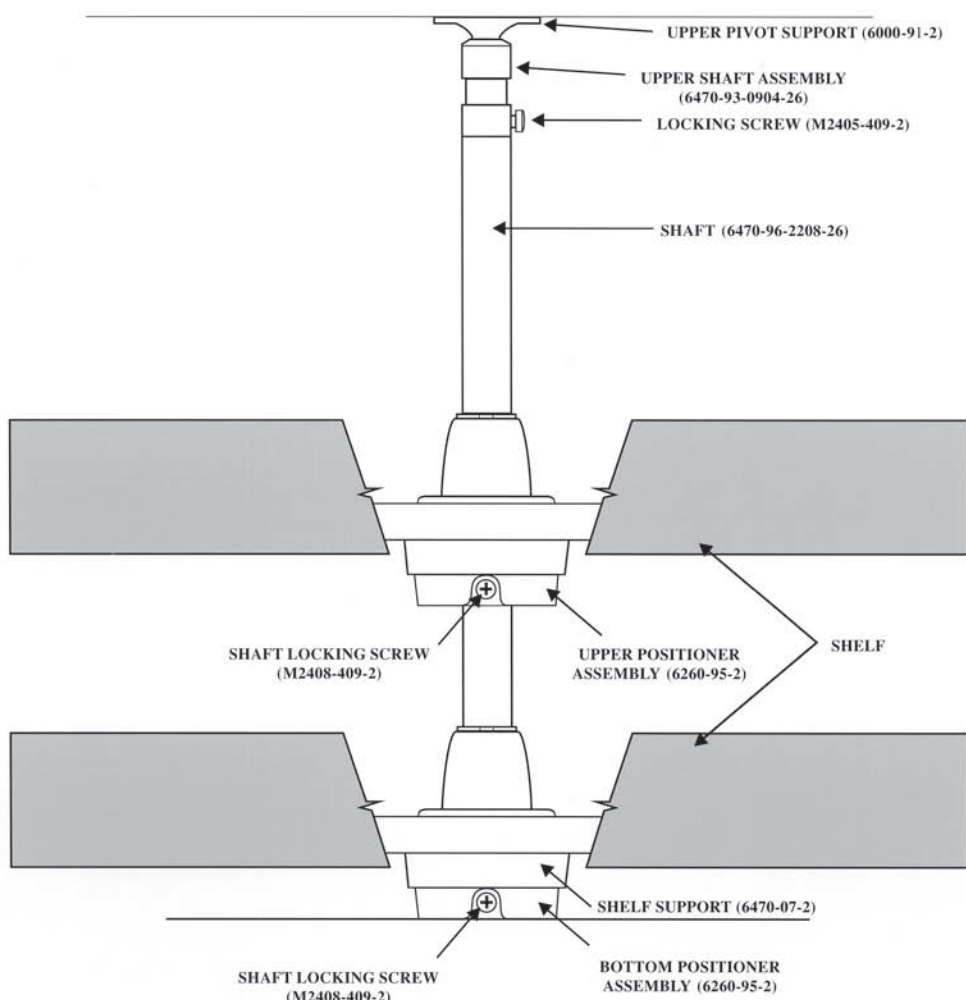

SEE TEMPLATE ON BACK SIDE FOR HOLE LOCATIONS


- 1) Insert Shelf Support in tray from bottom with keyway to rear of tray.
- 2) Position Top Shelf Hub on top of tray with keyway to rear of tray.
- 3) Install three (3) $\frac{3}{4}$ " x #8 (M1812-251-2) Self Tapping Pan Head Fasteners through Top Shelf Hub into Shelf Support and tighten.
- 4) Locate mounting holes with template and install bottom positioner on cabinet floor with four (4) $\frac{3}{4}$ " x #8 (F1208-13-2) oval head screws. **NOTE:** Shaft Locking Screw must face cabinet opening.
- 5) Locate mounting holes with template and install upper pivot support on cabinet top with four (4) $\frac{1}{2}$ " x #8 (F0808-26-2) truss head screws.
- 6) Slide upper shelf onto shaft. Slide second positioner onto shaft and temporarily tighten screw with positioner approximately 15 inches from bottom end of shaft. Slide bottom shelf onto shaft.
- 7) Slide upper assembly into upper end of shaft. Loosely install locking screw. Insert shaft assembly into bottom positioner assembly. Lift upper shaft assembly to engage in upper pivot support. Tighten screw.
- 8) Adjust lower shelf position by turning shaft until tray is centered on cabinet opening. Slide lower tray up shaft and tighten lower shaft locking screw. Lower tray, check centering and adjust if necessary.
- 9) Adjust upper shelf positioner by grasping and supporting upper positioner assembly while loosening locking screw. Rotate positioner and shelf into alignment and securely tighten locking screws.



REV·A·SHELF®


2400 Earl Jones Way Louisville, KY 40299
(800) 626-1126 rev-a-shelf.com

REV·A·SHELF REVOLVING 20" UPPER DIAGONAL WALL WOOD TRAY TEMPLATE

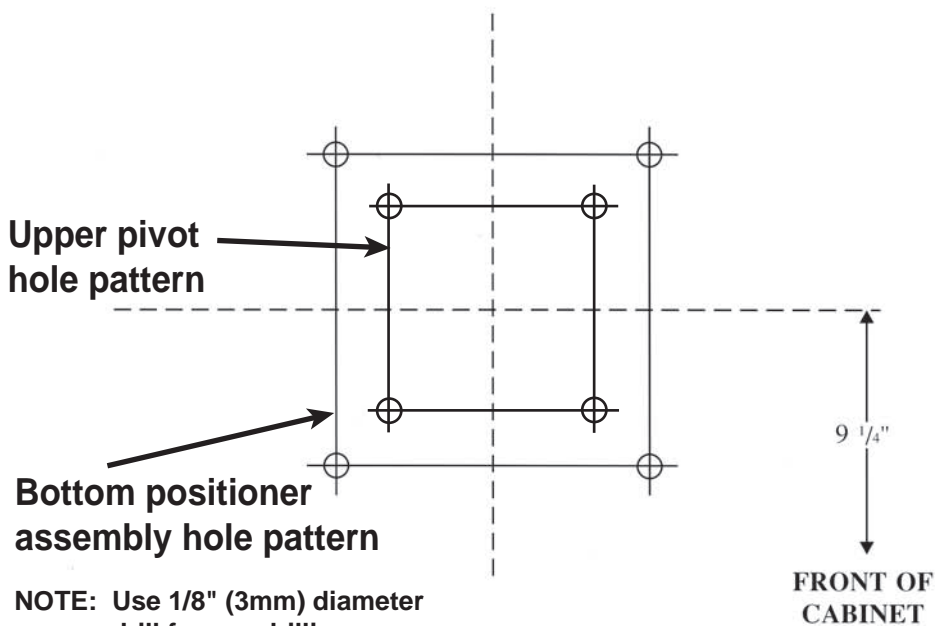

NOTE: Use 1/8" (3mm) diameter drill for pre-drilling

- 1) Locate centerline of cabinet opening for both top and bottom.
- 2) Place template on bottom of cabinet with template centerline aligned with cabinet opening centerline and front edge of template aligned with front of cabinet.
- 3) Spot mounting holes.
 - a) Predrill with 1/8" (max.) diameter drill.
 - b) Install positioner base with shaft locking screws to front of cabinet, and wheel axle parallel to cabinet opening.
- 4) Repeat step (2) for top of cabinet and install upper pivot support.

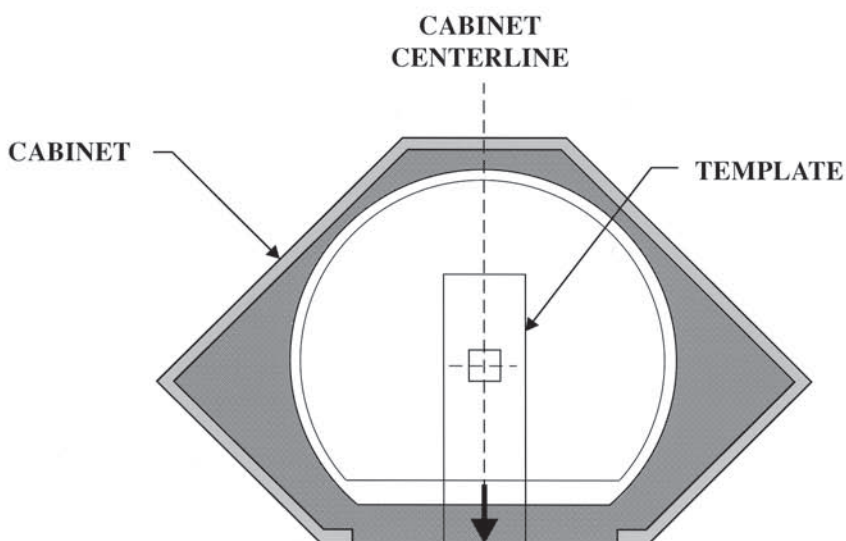

NOTE: Locations given provides proper clearance from back of cabinet.

FRONT OF CABINET

